SANTAGN®

ULTRAVIOLET WATER PURIFIERS



Model S2400C 40 GPM





ABOUT US

Since 1963, Atlantic Ultraviolet Corporation® has pioneered the discovery and development of beneficial uses of ultraviolet energy. Over the years, these efforts have led to the



development of valuable, cost effective, and environmentally sound techniques

and products now known and respected throughout the world.

The UV Application Specialists at Atlantic Ultraviolet Corporation® assist customers in the selection of germicidal lamps and equipment. Their specialized knowledge is a valuable resource in formulating effective and cost-conscious ultraviolet solutions. Extensive inventories and a dedicated staff enable Atlantic Ultraviolet Corporation® to fulfill its commitment to provide fast deliveries and responsive customer service.

GERMICIDAL


Ultraviolet water purification is a unique and rapid method of water disinfection without the use of heat or chemicals.

SANITRON® Ultraviolet Purifiers utilize germicidal ultraviolet lamps that produce short wave radiation lethal to bacteria, viruses and other microorganisms present in water.

Through the years ultraviolet technology has become well established as a method of choice for effective and economical water disinfection.

SANITRON® Ultraviolet Water Purifiers are the ideal solution for an ever growing range of water treatment applications.

Atlantic Ultraviolet Corporation® equipment and systems are manufactured in the USA.

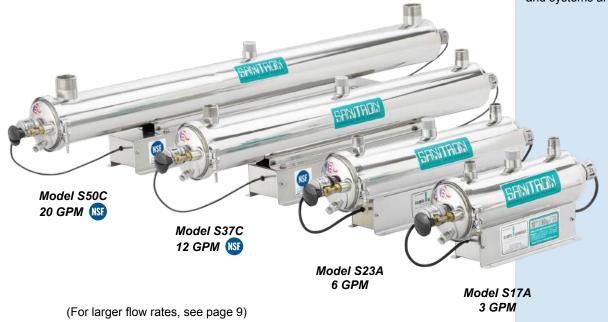

NSE Certified to NSF [®]/ANSI 61 & 372



ADVANTAGES

PRINCIPLE OF OPERATION

Effective

Virtually all microorganisms are susceptible to SANITRON® ultraviolet disinfection

Economical

Hundreds of gallons are purified for each penny of operating cost

Safe

No danger of overdosing, no addition of chemicals

Fast

Water is ready for use as soon as it leaves the purifier – no further contact time required

Easy

Simple installation and maintenance—
Compact units require minimum space

Automatic


Provides continuous disinfection without special attention or measurement

Chemical Free

No chlorine taste or corrosion problems


Versatile

Capacities available from 3 to 416 gallons per minute (GPM)

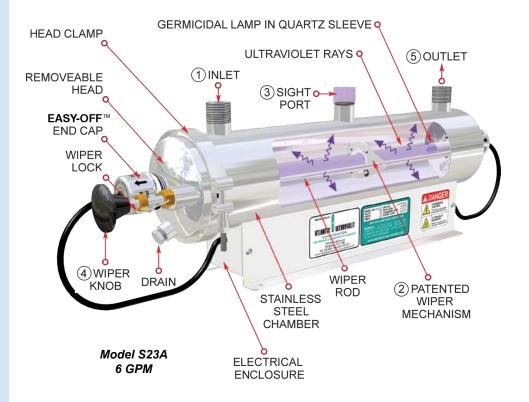

- ① The water enters the purifier and flows into the annular space between the quartz sleeve and the chamber wall.
- ② The wiper segments induce turbulence in the flowing liquid to assure uniform exposure of suspended microorganisms to the lethal ultraviolet rays.
- Translucent sight port provides positive indication of germicidal lamp operation.
- The wiper assembly facilitates periodic cleaning of the quartz sleeve without any disassembly or interruption of purifier operation.
- (5) Water leaving the purifier is instantly ready for use.

SPECIAL FEATURES

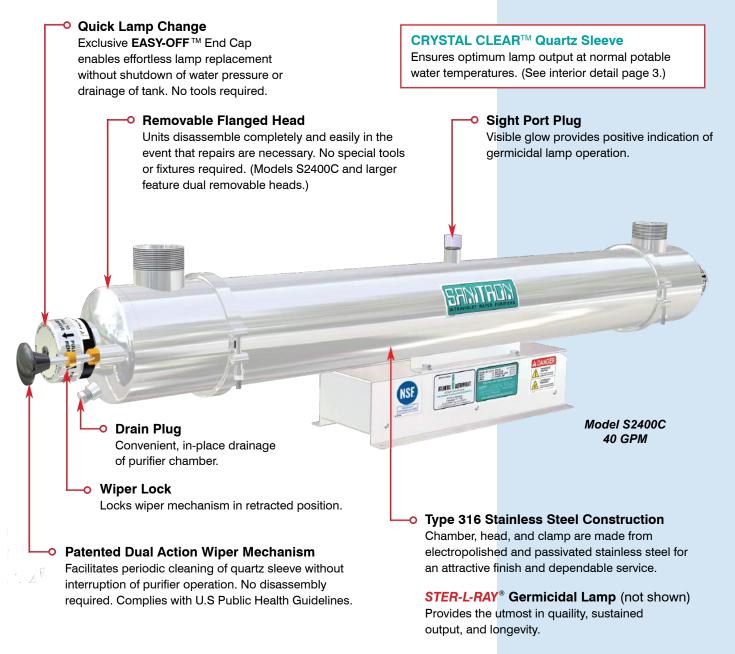

INSTALLATION & MAINTENANCE

The purifier is installed horizontally as close as possible to the point of use. Connection of the inlet and outlet to water supply and insertion of power plug into 3-wire GFCI grounded outlet is all that is required.

Ordinary maintenance consists of cleaning the quartz sleeve with the manual wiper once monthly or more frequently where conditions dictate. Lamp replacement is recommended every 10,000 hours of operation (approximately 14 months of continuous service).



OPTIONAL ACCESSORIES

MONITORING OPTIONS



Promate™ Audio Alarm Activated by the **SENTRY**™ or GUARDIAN™ and alerts user to any malfunction detected



Promate™ **Elapsed Time Indicator** Real-time, non-resettable display of accumulated operating hours



Promate™ Solenoid Valve Operates with the GUARDIAN™ or SENTRY™ and prevents flow during detected malfunctions



Promate™

Time Delay Mechanism Operates with **GUARDIAN**™ or **SENTRY**™ and **Promate**™ solenoid valve to provide a 2-minute warm-up period for lamp to achieve full germicidal output



SureFLO™ Flow Control Valve

- Limits water flow to rated capacities
- · Available in PVC and stainless steel



Promate™ Wall Mounting Kit

- Stainless steel material provides professional finish
- Pre-drilled and ready for quick and easy mounting of water purifier
- · Optimizes free air circulation to cool ballast housing



QUANTUMTM **Thermal Optimizer**


Used to help regulate the water temperature inside the purifier's chamber

Good

The STERALERT™ Lamp Status Alarm monitors visible light emitted through the sight port plug of the water purifier and activates an audible alarm when visible light falls below acceptable levels.

- · Easy installation, no tools required
- · Mounts on the sight port plug
- Operates on a 9v battery
- Monitors the visible light emitted by the ultraviolet lamp (does not monitor the ultraviolet intensity)
- Produces a high frequency tone, pulsed at two to three cycles per second
- Warns of lamp or power failure
- Available with Remote Sounder
- · Available with Dry Contact for Connection to PLC
- Optional 120v 60Hz Power Adapter available
- · Available for use with all MIGHTY*PURE® and SANITRON® models

Better





- Plug **SENTRY**™ into an electrical outlet, then plug water purifier into **SENTRY**TM
- Operates optional Solenoid Valve and/or Audio Alarm
- Easily adaptable for use with other water purifier brands
- · Warns of lamp failure
- Available for 120v 50/60Hz or 220v 50/60Hz (water purifiers operating with electronic ballasts)
- · Available for use with most Bio-Logic®, MINIPURE®, MIGHTY ★ PURE® and SANITRON® models

Best

The **GUARDIAN**™ Ultraviolet Monitor visually indicates the level of germicidal ultraviolet energy that penetrates the quartz sleeve and the water within the disinfection chamber. The **GUARDIAN**™ Ultraviolet Monitor is capable of operating an optional Audio Alarm and Solenoid Valve. In addition, the GUARDIAN™ Ultraviolet Monitor will detect loss of ultraviolet due to lamp outage, component or power failure. Use of the Ultraviolet Monitor is recommended by the US Public Health Service "Criteria for the Acceptability



The GUARDIAN™ Ultraviolet Monitor will detect reduction of ultraviolet levels due to:



· Fouling or deposits on quartz sleeve.

of an Ultraviolet Disinfection Unit."

- Poor ultraviolet transmission through the water. (Color, turbidity, organic or other impurities in the water can reduce or interfere with the transmission of ultraviolet rays.)
- Depreciation of lamp output due to usage or other cause. Lamp output gradually depreciates with use.
- Lamp replacement is recommended once each year.
- · Available for use with all MIGHTYPURE® and SANITRON® models.

Options may be obtained when purchase of SANITRON® unit is made or added at a later date. For further details visit Ultraviolet.com and BuyUltraviolet.com.


ULTRAVIOLET DOSAGE


Germicidal lamps provide effective protection against microorganisms. A small cross-section is shown below.

ORGANISM	ALTERNATE NAME	TYPE	DISEASE	DOSE*
Bacillus subtilis spores	B. subtilis	Bacteria		22,000
Bacteriophage	Phage	Virus		6,600
Coxsackie virus		Virus	Intestinal infection	6,300
Shigella spores		Bacteria	Bacterial Dysentery	4,200
Escherichia coli	E. coli	Bacteria	Food poisoning	6,600
Fecal coliform		Bacteria	Intestinal infection	6,600
Hepatitis A virus	Infectious Hepatitis virus	Virus	Hepatitis of the liver	8,000
Influenza virus	Flu virus	Virus	Influenza	6,600
Legionella pneumophila		Bacteria	Legionnaires' Disease	12,300
Salmonella typhi		Bacteria	Typhoid Fever	7,000
Staphylococcus aureus	Staph	Bacteria	Food poisoning, Toxic Shock Syndrome, etc.	6,600
Streptococcus spores	Strep	Bacteria	Strep throat	3,800

When used as directed to disinfect clear water, SANITRON® Water Purifiers provide an ultraviolet dosage in excess of 30,000 microwatt seconds per square centimeter (µWSec/cm2).

OPERATING CHARACTERISTICS

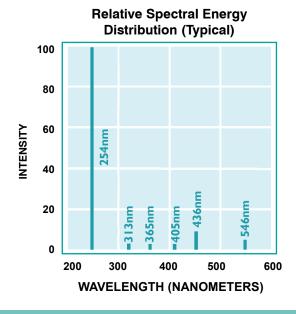

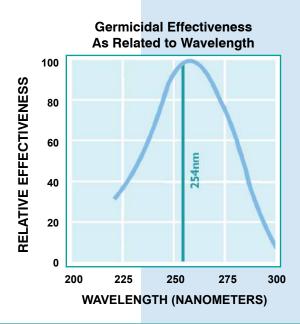

Approximately 95% of the ultraviolet energy emitted from *STER-L-RAY*® germicidal lamps is at the mercury resonance line of 254 nanometers, the region of germicidal effectiveness most destructive to bacteria, mold, and virus.



^{*} Nominal Ultraviolet dosage (μ WSec/cm2) necessary to inactivate better than 99% of specific microorganism. Consult factory for more complete listing.

GENUINE STER-L-RAY® GERMICIDAL LAMPS

STER-L-RAY® Germicidal Lamps are shortwave, low pressure mercury vapor discharge tubes that produce ultraviolet wavelengths lethal to microorganisms.

STER-L-RAY® Germicidal Lamps are well suited to applications requiring high ultraviolet intensity such as water purification.

STER-L-RAY® Instant Start Germicidal Lamps are instant starting and utilize a coil filament on each end which operates hot. Lamp life is governed by the life of the electrodes and is affected by the frequency of starting.

STER-L-RAY® Preheat Germicidal Lamps are operated by a preheat-start circuit that employs a compact and economical ballast. The preheat circuit requires four electrical connections per lamp and a slight to moderate delay is needed to start the lamp.

STER-L-RAY® GX Germicidal Lamps yield up to 2/3 more ultraviolet output than standard lamps of the same length.

STER-L-RAY® and the STER-L-RAY® logo are trademarks of Atlantic Ultraviolet Corporation®.

CAUTION: Exposure to direct or reflected germicidal ultraviolet rays will cause painful eye irritation and reddening of the skin. Persons subject to such exposure must wear suitable face shield, gloves and protective clothing.



GERMICIDAL LAMP DATA

Lamp Number	Purifier Model No.	Nominal Lamp Length	Power Consumption 1	Ultraviolet Output 2	Rated Effective Life
05-1098-R	S17A	11%" (302mm)	14 Watts	4.0 Watts	10,000 Hrs
05-1097-R	S23A	17¾" (451mm)	21 Watts	7.3 Watts	10,000 Hrs
05-1343-R	S37C	33%" (860mm)	41 Watts	15.0 Watts	10,000 Hrs
05-1334-R	S50C	45%" (1165mm)	55 Watts	21.0 Watts	10,000 Hrs
05-1311-R ③	S2400C & Larger	46¼" (1175mm)	110 Watts	48.0 Watts	10,000 Hrs

- 1 Wattage is lamp watts only and does not include ballast loss (approximate).
- 2 Maximum rated output at 254 nanometers.
- 3 Patented by Atlantic Ultraviolet Corporation®.

The lamps listed above have been especially developed and are recommended for use with SANITRON® Water Purifiers.

All STER-L-RAY® lamps used in SANITRON® units are low pressure type which afford the maximum efficiency in producing the required germicidal rays. In addition, has advantage of high efficiency and low power requirements.

STANDARD MODELS

WATER QUALITY RECOMMENDATIONS



Maximum Concentration Levels Before Ultraviolet

Turbidity	5 NTU
Suspended Solids	10 mg/L
Color	None
Iron	0.3 mg/L
Manganese	0.05 mg/L
рН	6.5 – 9.5
Hardness	6 gpg

Effectively treating water with higher concentration levels than listed above can be accomplished, but may require added measures to improve water quality to treatable levels.

Model Per Pe			Inlet and Outlet	Replacement	Power Consumption	Unit Dimensions (Inches)		Shipping Data (lbs.)		
	Hour	1	Lamps	2	Length	Width	Height	Gross Wt.	Net Wt.	
S17A	3	180	3/4" (19mm) NPT	05-1098-R	18 Watts	17-3/8 (441 mm)	4-5/16 110 mm)	8-3/16 (208 mm)	11	8
S23A	6	360	3/4" (19mm) NPT	05-1097-R	25 Watts	23-3/8 (594 mm)	4-5/16 (110 mm)	8-3/16 (208 mm)	13	12
NSF *S37C	12	720	1" (25mm) NPT	05-1343-R	48 Watts	37-3/8 (949 mm)	5-11/16 (144 mm)	9-1/2 (241 mm)	25	25
NSF S50C	20	1,200	1-1/2" (38mm) NPT	05-1334-R	65 Watts	50-3/8 (1280 mm)	5-11/16 (144 mm)	9-1/2 (241mm)	34	29
*S2400C	40	2,400	2" (51mm) NPT	05-1311-R	140 Watts	52-1/8 (1324 mm)	6-5/8 (168 mm)	11-1/8 (283mm)	40	36

Note: When used as directed to disinfect clear water, SANITRON® Water Purifiers provide an ultraviolet dosage in excess of 30,000 microwatt seconds per square centimeter (µWSec/cm2).

- 1 All inlets and outlets are male pipe threads.
- 2 Total power consumption including ballast loss.
- NSF Certified to NSF ®/ANSI 61 & 372
- * **C** € compliant version available

- Maximum recommended operating pressure for all purifiers is 100 PSI.
- Pressure drop at maximum recommended flow rate is less than 5 PSI.
- Flow rates are based on Maximum Concentration Levels.
- 120 Volt and 220 Volt units are standard.
- 12 and 24 Volt units are also available for S17A, S23A and S37C
- SANITRON® is available for operation on public power supplied throughout the world.
- Consult factory with specific power requirements.
- Model S2400C is available with alternate inlet/outlet fittings.



COMMERCIAL & INDUSTRIAL

Flexibility

System components are readily reconfigured to meet changing flow and process requirements.

Independent Monitoring

Single lamp chamber design enables separate output monitoring of each ultraviolet lamp.

Standby Capacity

Reserve chambers permit shutdown or replacement of individual components without interruption of service.

Special Options

- Sanitary and Custom Fittings for system compatibility (Use of Sanitary Fittings does not mean High-Purity Standards are met)
- Special Configurations for TOC and ozone reduction

(For larger capacities please refer to our **MEGATRON**® Ultraviolet Water Disinfection catalog.)



Model S5,000C 83 GPM

Shown with supplied Interconnect piping, optional **GUARDIAN**[™] Digital Ultraviolet Monitors, **Promate**[™] Solenoid Valve, **SureFLO**[™] Flow Control Valve and customer supplied piping, union and shut-off valve.

Model	Model Gallons Gallons Inlet and Outlet Hour 6			_	Power Consumption	Unit Dimensions (Inches)			Shipping Data (lbs.)	
		7	Length	Width	Height	Gross Wt.	Net Wt.			
*S5,000C ①	83	5,000	2" (51mm) NPT	05-1311-R (2)	280 Watts	52-1/8 (1324 mm)	17 (432mm)	15 (381 mm)	116	85
*S10,000C ②	166	10,000	2" (51mm) NPT	05-1311-R (4)	560 Watts	52-1/8 (1324 mm)	21-1/8 (537 mm)	34¾ (883 mm)	267	188
*S15,000C ③	250	15,000	2" (51mm) NPT	05-1311-R (6)	840 Watts	52-1/8 (1324 mm)	21-1/8 (537 mm)	53¾ 1365 mm)	400	263
*S20,000C ④	333	20,000	2" (51mm) NPT	05-1311-R (8)	1120 Watts	52-1/8 (1324 mm)	21-1/8 (537 mm)	71¾ (1822mm)	534	396
*S25,000C ⑤	416	25,000	2" (51mm) NPT	05-1311-R (10)	1400 Watts	52-1/8 (1324 mm)	21-1/8 (537 mm)	90¾ (2305 mm)	670	520

Note: When used as directed to disinfect clear water, SANITRON® Water Purifiers provide an ultraviolet dosage in excess of 30,000 microwatt seconds per square centimeter (µWSec/cm2).

- 1 Two S2400C's connected in series, 1 inlet and 1 outlet.
- 2 Two S5,000C's connected in parallel, 2 inlets and 2 outlets.
- ③ Three S5,000C's connected in parallel, 3 inlets and 3 outlets.
- 4 Four S5,000C's connected in parallel, 4 inlets and 4 outlets.
- ⑤ Five S5,000C's connected in parallel, 5 inlets and 5 outlets.
- 6 All inlets and outlets are male pipe threads.
- Total power consumption including ballast loss.

- Maximum recommended operating pressure for all purifiers is 100 PSI.
- Pressure drop at maximum recommended flow rate is less than 5 PSI.
- Flow rates are based on Maximum Concentration Levels, shown on page 8.
- 120 Volt and 220 Volt units are standard.
- SANITRON[®] is available for operation on public power supplied throughout the world.
- Consult factory with specific power requirements.
- Models S2400C through S25,000C are available with alternate inlet/outlet fittings.



Our S2400C water purifiers are certified to **NSF** *(ANSI Standard 61 & 372. They are used in modular form to build each of the models shown above.

* C C compliant version available

COMMERCIAL & INDUSTRIAL

APPLICATIONS

Model \$10,000C — 166 GPM

Shown with supplied Interconnect Piping, optional **GUARDIAN™** Digital Ultraviolet Monitors, Solenoid Valves, Flow Control Valves and customer supplied manifolds, piping, unions and shut-off valves.





élan Water Filters

Filters outperform conventional filters available for use with the SANITRON® S2400C and larger units.

Call factory for more information.

- Amusement / Water Parks
- Restaurants
- · Resorts / Hotels / Motels
- Ships / Yachts / Boats
- City / Well Water
- Fountains / Lakes / Ponds
- Laundry
- Apartment Complex
- Swimming Pools
- Nursing Homes
- Schools
- Laboratories
- Hospitals / Veterinary Clinics
- RV Parks / Campgrounds
- Medical Facilities
- Laboratories
- · Rainwater / Cisterns
- Burn Centers
- · Water Vending
- Universities / Schools
- Cooling Tower
- Animal Husbandry / Farms / Ranches
- Fish Farms / Hatcheries
- Food / Dairy Processing
- Bottling Facilities
- Water / Beer / Wine / Juices / Soft Drinks
- Pharmaceutical Mfg.
- Electronic Production
- Cosmetic Production
- TOC Reduction
- Ozone Reduction
- Plus countless other facilities



COMPARISON OF ATLANTIC ULTRAVIOLET WATER PURIFIERS

FEATURES [S] - Standard [O] - Optional [X] - Yes	Bio-Logic® Pure Water Pack™ 1.5 GPM	MINIPURE® 1 to 9 GPM	Ultimate® 4 to 9 GPM	MIGHTY*PURE® 3 to 20 GPM	SANITRON® 3 to 416 GPM	MEGATRON® 90 to 450 GPM
Chamber Material (Stainless Steel Type)	316	304	304	316	316	316
STER-L-RAY® Germicidal Ultraviolet Lamp with 10,000 Hours Rated Effective Life	S	s	S	S	s	s
Quick Lamp Change with the EASY-OFF ™ End Cap	S	S	-	s	S	S
CRYSTAL CLEAR™ Quartz Sleeve	S	S	s	s	s	S
Lamp Out Indicator Light(s)	S	S	-	-	-	S
Sight Port to View Lamp Operation	-	-	S	S	S	S
Drain Fitting	-	-	-	S	S	S
Dual Action Wiper Mechanism	-			-	Manual	Manual or Automatic
Suggested Mount Installation	Horizontal	Horizontal	Vertical	Horizontal	Horizontal	Horizontal
Removable or Rotatable Heads	S	-	_	_	S	S
Alternate Inlet/Outlet Fittings	-	-	-	-	0	0
Sediment and Carbon Filter	S	-	_	_	_	-
Promate™ Mounting Kit / Bracket	S	S	s	0	0 ①	_
GUARDIAN™ Ultraviolet Monitor	_	_	_	0	0	s
SENTRY™ Safety Sensor	0	0	-	0	0	_
Promate ™ Audio Alarm	S	S	S	0	0	_
Promate [™] Solenoid Valve	_	0	-	0	0	_
SureFLO™ Flow Control Valve	_	0	S	0	0	_
Promate™ Elapsed Time Indicator	0	0	-	О	0	S
Promate™ Time Delay Mechanism	-	0	-	0	0	-
Residential Use	Х	Х	х	X	X	_
Commercial Use	_	_	_	х	Х	Х
Industrial Use	-	-	-	-	Х	Х
C € Certified Models ②	_	_	_	х	Х	_
NSF Certified Models	-	-	-	X ③	X ④	-

① SANITRON® Model S10,000C through S25,000C come equipped with mounting rack.

② MIGHTY*PURE® MP36C and SANITRON® S37C, S2400C, S5000C, S10,000C, S15,000C, S20,000C, and S25,000C are available as € € Certified.

③ MIGHTY*PURE® MP36C and MP49C are available with NSF®/ANSI 55 for Disinfection Performance, Class B.

⁴ SANITRON® Models S37C, S50C, and S2400C are certified to NSF®/ANSI 61 & 372. Model S2400C is used in modular form to build larger models.

[•] When used as directed to disinfect clear water, Atlantic Ultraviolet Corporation® water purifiers provide an ultraviolet dosage in excess of 30,000 micro-watt seconds per square centimeter (µWSec/cm2).

[•] This list depicts options for 120v 50/60Hz operation. Consult factory for options with other power requirements.

The Standard of Excellence In Ultraviolet







Manufacturers / Engineers / Sales / Service - Germicidal Ultraviolet - Equipment & Lamps







375 Marcus Boulevard • Hauppauge, NY 11788 • 631.273.0500 • Fax: 631.273.0771 E-mail: Sales@AtlanticUV.com • Ultraviolet.com • BuyUltraviolet.com

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.

